


CABLE LIKE ME IS ALWAYS IN FASHION, BUT TO KEEP ME STYLISH, HERE ARE THE NSNs FOR SOME ACCESSORIES I'D LIKE TO HAVE...

Wire Tags (50)	NSN 9905-00-537-
red	8954
yellow	8955
green	8956
white	8957

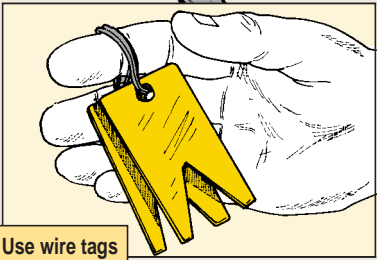


Use wire tags

Item	NSN
MK-356 splicing sleeve kit	5940-00-818-1774
Lance pole	5975-00-407-6371
TL-636 black electrical tape	5970-00-685-9059
TL-600 white electrical tape	5970-00-240-0620
TL-83 friction tape	5970-00-644-3167
TL-29 pocket knife	5110-00-240-5943
	
CS-34 tool carrier	5140-00-498-8898
TL-13 pliers without skinners	5120-00-239-8254
	
	
TL-13 pliers with skinners	5120-00-247-2063


AS TOUGH AS I AM, SOMETIMES I BREAK. THAT MEANS YOU'VE GOT TO SPLICE ME. THE U1R SPLICE, NSN 5940-00-935-8262, WILL HELP YOU DO THE JOB QUICK AND EASY ON WD-1, WD-1A AND WF-16 WIRE.

JUST MAKE SURE YOU USE THE RIGHT CRIMPER WITH THE SPLICE BECAUSE ANY OLD CRIMPER WON'T DO. USE THE E9BM CRIMPER, NSN 5120-01-421-3979.

Center U1R in E9B crimper and squeeze

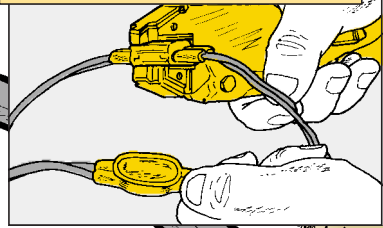

Tie ends with a single sheet bend knot

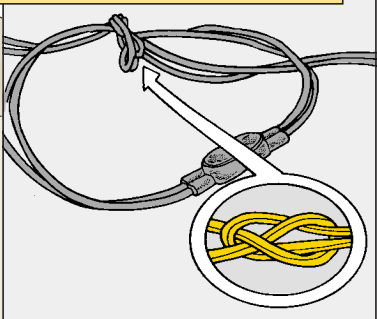

FOR SOME GOOD TIPS ON HOW TO LAY, RECOVER AND REPAIR ALL WIRE, SEE FM 24-20, FIELD WIRE AND FIELD CABLE TECHNIQUES.



NOW THAT WE'RE FRIENDS, ONE MORE WORD—DON'T ABUSE ME. I'M TOUGH, BUT I'M NOT INDESTRUCTIBLE. I'LL LAST LONGER AND CAUSE YOU A LOT LESS WORK IF YOU TAKE CARE OF ME WITH PREVENTIVE MAINTENANCE AND BY-THE-BOOK HANDLING.